

# AWP Refill Instructions

With your machine switched on and running, insert your refill key (87000) into the refill lock then turn




Now look at the display, it should read something like this

On this particular machine its asking for 122 £1 coins to refill



Insert your coins through the slot shown here

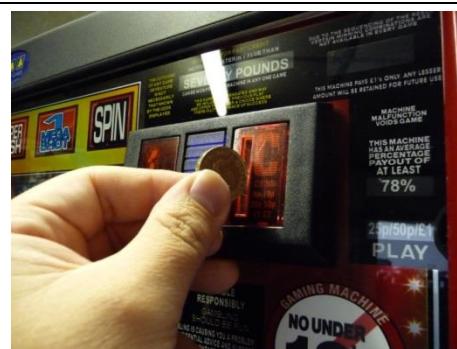

After inserting the coin the display should count down by 1, keep inserting coins (slowly) until the display reads "0" Zero



You can record the amount of coins you have refilled by a meter that is situated near the coin slot as shown here, then making a note of the numbers before and after you have refilled the machine, numbers shown in increments of 10p units





**Refill  
Meter**

**Digital  
Display**

**Refill Key/Lock**